## **LED Linear Pendant**

## LP17905-UNV-010-RT

INSTALLATION SHEET

## START FROM HERE

- Make sure POWER is COMPLETELY OFF at the fuse box
- Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area
- · Wear gloves at all time during this installation
- · Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

**Technical Support:** 1-855-855-8926

## Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- Use ELV (Electronic Low Voltage), TRIAC or 0-10V type of dimmer for dimming application
- 120-277V input

1. Remove fixture from its original package

2. Remote driver (4a) must be installed and voltage wires brought to the mounting location prior to fixture installation. Make proper electrical connections (black to hot "L", white to neutral "N", green to "GND", Dim + to purple, Dim- to gray) with wire nuts provided in hardware package. Secure driver lid (4d) to driver box (4b) with screws (4c)

Recommended Max Voltage Wire Length
12 AWG= 80ft
14 AWG= 50ft
18 AWG= 30ft

- Connect LED+/LED- wire from remote driver (4a) to approximate location. Make proper LED+/LED- wire connection with wire nuts provided
- **4.** Attach mounting plate **(1c)** to electrical junction box **(1a)** using junction box screws provided **(1e)** in hardware package
- **5.** Attach canopy (2a) to mounting plate (1c) with canopy screws (2b)
- **f.** Pull wire through aircraft barrel (3b) and stopper (3d). Secure aircraft barrel (3b) to mounting surface with anchor (3c) and screw (3a). Adjust wire to desired length and secure with set screw (3e). Insert wire gripper (2g) into aircraft barrel (3b) to close
- **1.** Fine tone wire length if necessary, by push and hold wire gripper (2g) and then adjust wire to desired length



