

QUESTIONS OR CONCERNS CONTACT CANARM AT:  
1-800-265-1833 (English) 1-800-567-2513 (French)  
Monday through Friday 8:00 AM to 5:00 PM E.S.T.



"INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS"  
"READ ALL INSTRUCTIONS"

**"IMPORTANT SAFETY  
INSTRUCTIONS"**  
**"SAVE THESE INSTRUCTIONS"**

## TOOLS AND MATERIALS REQUIRED:



Phillips  
Screwdriver



Pliers



Wire Cutters



Wrench

Wiring supplies  
as required by  
the Canadian  
Electrical Code  
and/or the  
Quebec  
Electrical code


## SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CONNECT THE GROUND WIRES (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.
4. CLEAN GLASS WITH WATER ONLY.






**NOTE: Product May Not Look Exactly As Shown In Figures.**

## INSTALLATION:

### STYLE#1

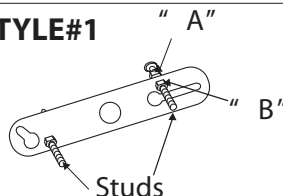

### STYLE#2

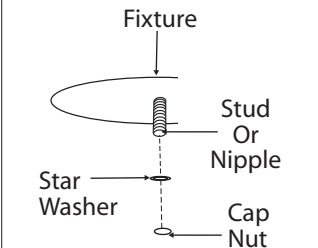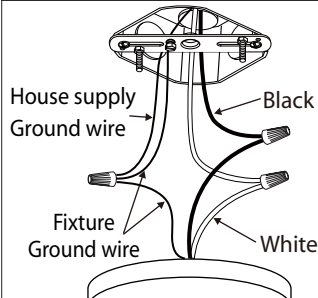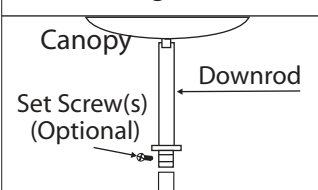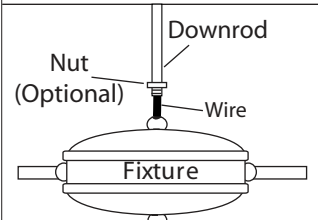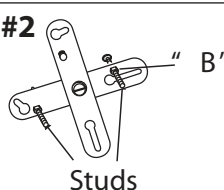

1. Refer to the mounting bracket style that matches the bracket that is included with your fixture. Attach the mounting bracket to the outlet box using electrical box screws (not included).

**Style#1** - Loosen hex nut "A" and "B". Adjust stud so it clears the fixture once assembled. Hold in place with "A" and lock in place with "B".

**Style#2** (Threaded holes) Loosen "B". Adjust stud to desired length and lock in place with "B".


2. Screw lower downrod into the fixture. Use the nut to tighten and lock the downrod into place. (optional)

**NOTE:** Determine your downrod length. Lock in place by tightening the set screws (optional).


3. Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical outlet box. Connect the black wire (or wire with marking) from the fixture to the black wire in the electrical box and connect the white wire from the fixture to the white wire in the electrical box.

4. Once connections of wires are completed, carefully tuck wires and wire nuts into the outlet box making sure no bare wire (on the black and white) is visible at the wire nuts. Install the light fixture to the wall by aligning the hole(s) in the fixture with the studs or nipple on the mounting bracket. Secure in place with cap nut(s) and star washer(s).


### STYLE #1A

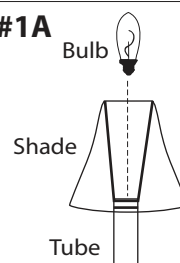


### STYLE #1B

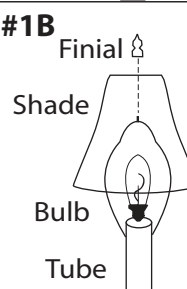


### STYLE #2

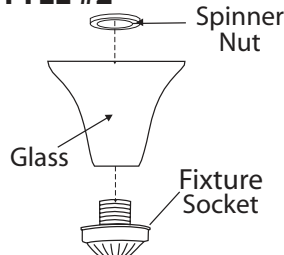

### STYLE #3

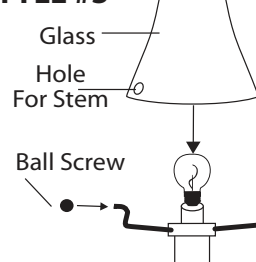

### STYLE #4

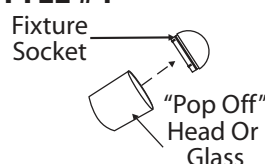

5. **Note:** Refer to the style of assembly that matches the style of your fixture. If your fixture has shades,

**STYLE #1A** - Place shade on tube, then install bulb.

**STYLE #1B** - Install bulb, shade then finial.

**STYLE #2** - Remove spinner nut from socket. Position glass on lamp and secure with spinner nut.

**Note:** Glass may face up or down.

**Note:** If your fixture has candle-style lights, slide the tubes over the upright sockets

**STYLE #3** - Install proper bulb type and wattage before assembling the glass. Remove ball screw from the curved stem. Position glass on lamp with the curved stem being inserted through the hole in the glass. Hand tighten the ball screw to secure the glass in place.

**STYLE #4** - Snap "pop off" head or glass onto fixture (push, or push and turn (it depends on the style of your fixture)).

6. If not already done, install proper bulb type and wattage. (not included)