




Rotatable Wall Packs

Installation Instructions

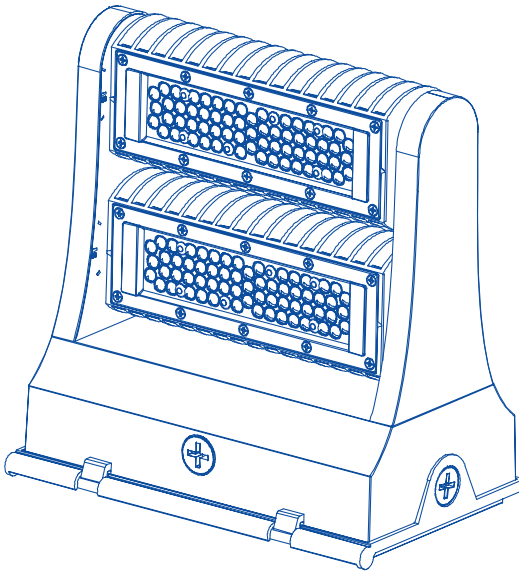

 **CAUTION! Risk of Electrical Shock**

For RWP02 40W, 60W, and 80W Fixtures

WARNINGS



Risk of Fire, Electrical Shock, Cuts or other Casualty Hazards

Installation and maintenance of this product must be performed by a qualified electrician. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

Risk of Fire and Electric Shock

Make certain power is OFF before starting installation or attempting any maintenance. Disconnect power at fuse or circuit breaker.

Risk of Fire

Refer to product label for specific minimum supply conductor requirements.

Risk of Burn

Disconnect power and allow fixture to cool before handling or servicing.

Risk of Personal Injury

Fixture may become damaged and/or unstable if not installed properly.

Failure to comply with these instructions may result in death, serious bodily injury and property damage.

DISCLAIMER OF LIABILITY: CSC LED assumes no liability for damages or losses of any kind that may arise from the improper, careless, or negligent installation, handling or use of this product.

NOTICE: Green ground wire provided in proper location. Do not relocate.

ATTENTION RECEIVING DEPARTMENT: Note actual fixture description of any shortage or noticeable damage on delivery receipt. File claim for common carrier (LTL) directly with carrier. Claims for concealed damage must be filed within 15 days of delivery. All damaged material, complete with original packing must be retained.

SAFETY: This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances. Proper grounding is required to insure personal safety. Carefully observe grounding procedure under installation section.

APPLICATIONS: This lighting fixture is designed for outdoor lighting services, and should not be used in area of limited ventilation or inside high ambient temperature enclosures. It must be stored in a dry location prior to installation. Do not expose lighting fixture to rain, dust or other environmental conditions prior to installation and insertion of photo control or shorting cap (if so equipped). Best results will be obtained if installed and maintained according to the following recommendations.

INSTALLATION

NOTE: To weatherproof your outdoor installation, use silicone sealant for all holes in the fixture housing (mounting, conduit, plugs, photocontrols, etc.) and all edges between the fixture housing and the mounting surface not including the bottom. If you remove one of the conduit plugs and use an alternate conduit location, add thread sealing tape to plug to ensure watertight seal.

1. Open the fixture by loosening the two Phillips head screws on the side opposite the hinge (Fig. 1 and 2).
2. The back plate has a cast-in drill pattern template to match standard recessed junction boxes and a 1/2" NPT tapped hole for surface conduit. Prepare the back plate for mounting by drilling or knocking out the appropriate holes (Fig. 3). Install the round foam sealing gasket when attaching the back plate to the wall (Fig. 4). Hole distances are illustrated in Fig. 5.
3. Drill holes on the wall according to the locating plate.
4. Line up the back plate in the desired location and mount securely (hardware not supplied) (Fig. 6)

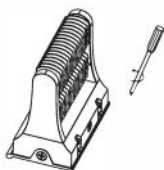


Fig. 1

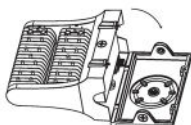


Fig. 2

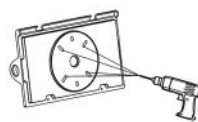


Fig. 3




Fig. 4

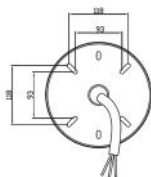


Fig. 5

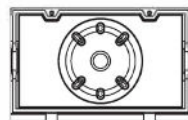


Fig. 6

5. Place the lens assembly back into the hinge (Fig. 7). Route the branch circuit wires inside the fixture. If using a junction box, bring the branch circuit wires through the rear hole into the fixture. Splice the branch circuit power leads to the fixture power leads, black to black/brown (line), white to white/blue (neutral), and green to green/yellow (ground) (Fig. 8).
6. Secure the lens assembly onto the base using the provided Phillips head screws (Fig. 9).

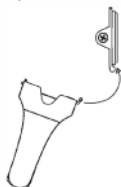


Fig. 7



Fig. 8


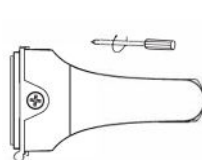



Fig. 9

COLOUR TEMPERATURE SELECTION

The fixture's colour temperature can be adjusted prior to securing the lens assembly to the back plate.

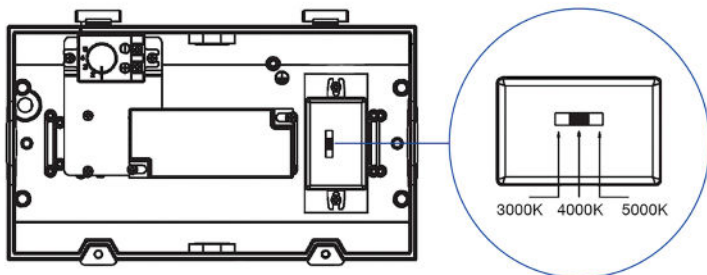

DIMENSIONAL DRAWING

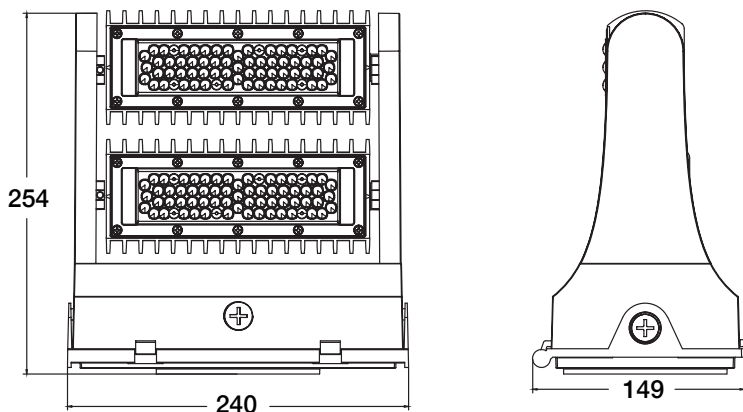

Questions or Concerns? We are happy to help!

Email Us: info@csc-led.com

Call Us: 1-888-900-9885